



User and Assembly Manual Multi-Coupling System




Note:


The wrong choice or incorrect use of the multi-coupling system can result in material damage and personal injury.

1. Design of the Multi-Coupling System


The multi-coupling system is made up of two parts: the **machine side (MKM)** with a pre-installed lever system as well as the **tool side (MKW)**.

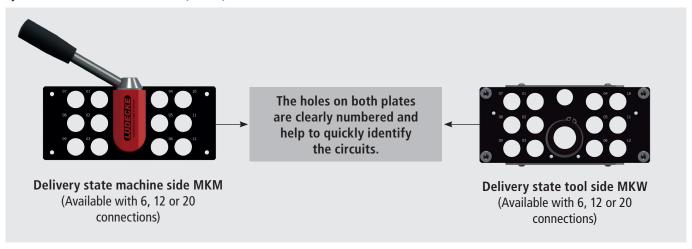

The **machine side** is available with different **single couplings including a safety ring** for mounting.

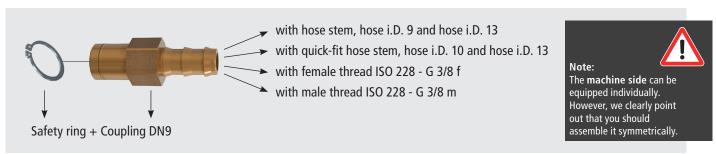

The **tool side** is available with different **plugs including a safety ring** for mounting.

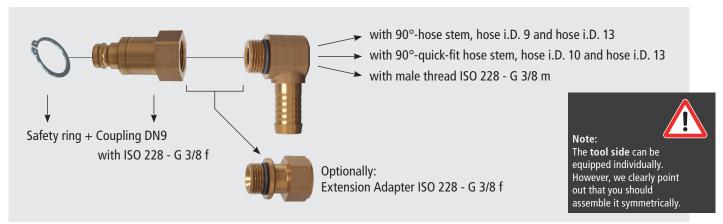


2. Assembling the Multi-Coupling System

2.1 Machine Side (MKM)

Step 1: Push the coupling into the desired position.

Step 2: Use the mounting pliers, to place the safety ring in the groove of the coupling.

Step 3: Equip the machine side with couplings as needed.

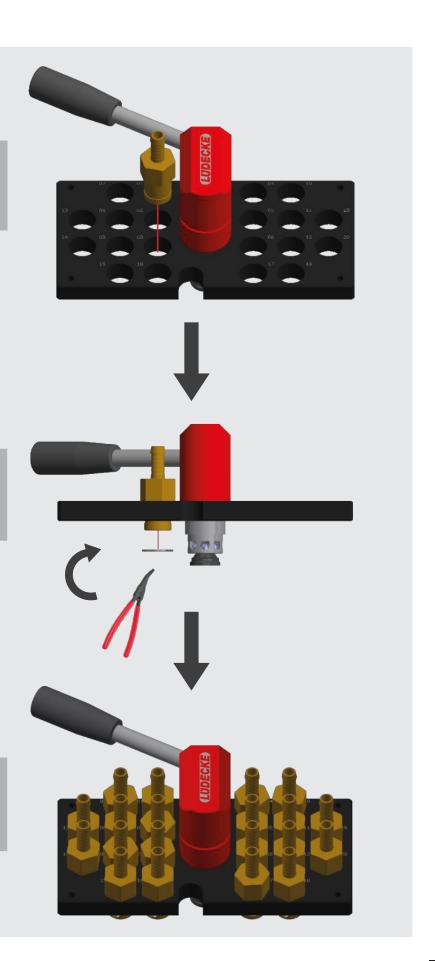


2. Assembling the Multi-Coupling System

2.2 Tool Side (MKW)

Step 1:
When required, pre-mount the plug with 90° barbed fitting and adapter.


Step 2:
Push the plug into the desired position.

Step 3:
Use the mounting pliers, to place the safety ring in the groove of the plug.

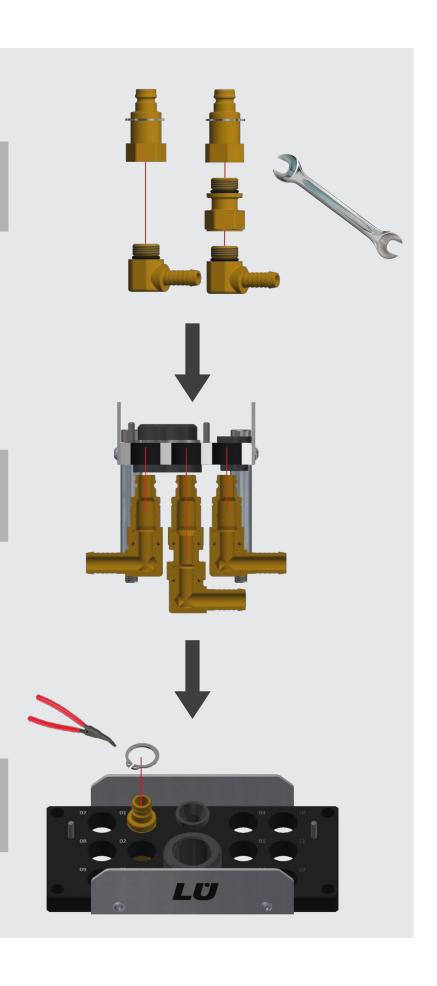

3. Operating the Multi-Coupling System

Step 1:
Use an Allen wrench to mount the tool side (screws and spacer sleeves are enclosed).

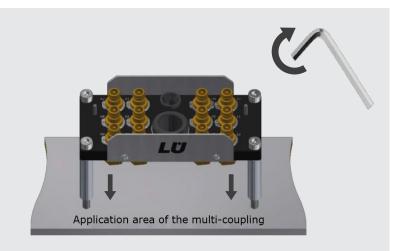

Step 2:
Push the machine side, with lever in open position (right), into the centering bushing and plug of the tool side.

Tool Side (Infographic without guiding plate)

Stept 3:
Push the lever to the left to lock it.
The multi-coupling system is ready to be used

